

## MASTERFIL Inc.

6907 FM 1488 MAGNOLIA TX 77354

281-356-1258 | 281-356-1259 FAX

permafilinc@yahoo.com

### PRECAION

El filtero y partes estan '**CALIENTE**'

Agarre precaciones para no que marse....

**NOSOTROS RECOMENDAMOS CAMBIAR EL FILTERO  
CADA 7 DIAS O CADA CAMBIO  
DE ACIETE PARA LAS MEJOR RESULTADOS....**

### INSTRUCCIONES PARA QUITAR Y CAMBIAR EL MASTERFIL® FILTERS



**FIG 1**

Desconecte la mangera que va al filtero. Quite el filtero del tanque.



**FIG 2**

Raspe el filtero quitando le todo lo pesado que tanga tirelo al la bazura. Quite le la pipa que va connectado a la mangera.



**FIG 3**

Quite el cierre de asero, levantando de un lado asta que lo quite.



**FIG 4**

Quite elemento del sobre filtro suzio lave el elemento con agua caliente y seca lo bien. Ponga el elemento adentro del sobre MASTERFIL® Nuevo.



**FIG 5**

Doble los dos lados del sobre filtro y pongale el cierre de asero de un lado al otro asta bajo para asegudad y seyar el filtero. Atornie la pipa al elemento in enstale debuelta y esta listo para filtro.....

MASTERFIL® PATENT PENDING

## Masterfil Inc

6907 FM 1488 MAGNOLIA TX 77354  
281-356-1258 | 281-356-1259 FAX  
permafilinc@yahoo.com

### WARNING

Filter and Fryer parts may be 'HOT'  
Take proper precautions to avoid possible burns.


FOR ABSOLUTE FILTRATION & MAXIMUM FLOW RATE  
WE RECOMMEND YOU CHANGE YOUR FILTERS EVERY 7 DAYS  
OR EVERY OIL CHANGE

### INSTRUCTIONS TO REMOVE & REPLACE MASTERFIL® FILTERS



**FIG 1**

Disconnect suction hose from filter assembly by Quick Disconnect & remove filter assembly out of filter pan.

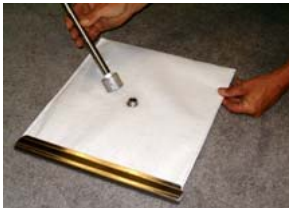

**FIG 2**

Scrape off all debris into the trash & unscrew stand pipe from filter.



**FIG 3**

Remove SS closure clip by lifting off one side in a hinge motion until off of filter.



**FIG 4**

Remove Insert from dirty filter and wash insert with hot water and dry thoroughly. Place clean and dry insert into new MASTERFIL® filter envelope.



**FIG 5**

Fold both sides over top of insert & place SS closure clip on one side – hinge over & firmly press clip all the way down to secure and seal filter. Screw suction pipe assembly on to filter assembly tightly. The filter is now ready to go back into the clean filter pan. Re-connect suction pipe assembly and the system is ready.

MASTERFIL® patent pending